

ANCHOR CHAIN

The Anchor chain has been marked; please use the depth gauge and the marks on the chain to pay out the correct amount of chain. At least 2 times the length of chain to the depth of water.

Solid Red painted chain shows first 5 metres	
Red marker	10 metres
Green marker	20 metres
Yellow marker	30 metres
Blue marker	40 metres

When dropping the anchor,

Depth of water	Let out chain at least up to
Up to 5 metres	Red marker
5 to 10 metres	Green marker
10 to 15 metres	Yellow marker
15 to 20 metres	Blue marker

It is OK to let out more chain, but the anchor may drag if you use less.